

Maintenance chart

| Service_Points | Cleaning | | | | | Change fluid | |
|--|----------|-------|---|---|---|--------------|--|
| | Grease | Check | | | | Replace | |
| | | | | | | Bleed | |
| | | | | | | | Page Nb. |
| Every 10 hours | | | | | | | |
| General inspection | x | | | | | | General inspection |
| Engine oil level - Check | x | | | | | | Engine oil level - Check |
| Hydraulic oil level - Check | x | | | | | | Hydraulic oil level - Check |
| Engine coolant level - Check | x | | | | | | Engine coolant level - Check |
| Every 50 hours | | | | | | | |
| Grease fittings | | x | | | | | Grease fittings |
| Cab air filter - Check and cleaning | | | x | | | | Cab air filter - Check and cleaning |
| Engine air filter - Cleaning | | | x | | | | Engine air filter - Cleaning |
| Brake oil level - Check | x | | | | | | Brake oil level - Check |
| Front axle oil level - Check | x | | | | | | Front axle oil level - Check |
| Rear axle oil level - Check | x | | | | | | Rear axle oil level - Check |
| Axles reduction gears oil level - Check | x | | | | | | Axles reduction gears oil level - Check |
| Gearbox oil level – Check | x | | | | | | Gearbox oil level – Check |
| Tires pressure - Check | x | | | | | | Tires pressure - Check |
| Wheel nuts tightening - Check | x | | | | | | Wheel nuts tightening - Check |
| Initial 150 hours | | | | | | | |
| Front axle oil - Change (initial 150 hours) | | | | x | | | Front axle oil - Change (initial 150 hours) |
| Rear axle oil - Change (initial 150 hours) | | | | x | | | Rear axle oil - Change (initial 150 hours) |
| Axles reduction gears oil - Change (initial 150 hours) | | | | x | | | Axles reduction gears oil - Change (initial 150 hours) |
| Gearbox oil - Change (initial 150 hours) | | | | x | | | Gearbox oil - Change (initial 150 hours) |
| Every 250 hours | | | | | | | |
| Air-conditioning condenser - Cleaning | | | x | | | | Air-conditioning condenser - Cleaning |
| Compressor drive belt - Check | x | | | | | | Compressor drive belt - Check |
| Every 500 hours | | | | | | | |
| Engine oil and oil filter - Change | | | | | x | | Engine oil and oil filter - Change |
| Fuel prefilter - Replace | | | | | x | | Fuel prefilter - Replace |
| Fuel filter - Replace | | | | | x | | Fuel filter - Replace |
| Every 1000 hours | | | | | | | |
| Air intake lines - Check | x | | | | | | Air intake lines - Check |

| Service_Points | Cleaning | | | | Change fluid | |
|--|----------|--|---|---|--------------|--|
| | Grease | | | | Replace | |
| | Check | | | | Bleed | |
| | | | | | Page Nb. | |
| Engine coolant - Replace | | | | | x | Engine coolant - Replace |
| Hydraulic oil tank - Oil change and cleaning | | | | x | | Hydraulic oil tank - Oil change and cleaning |
| Hydraulic oil filter - Replace | | | | | x | Hydraulic oil filter - Replace |
| Cab air filter - Replace | | | | | x | Cab air filter - Replace |
| Front axle oil - Change | | | | | x | Front axle oil - Change |
| Rear axle oil - Change | | | | | x | Rear axle oil - Change |
| Axles reduction gears oil - Change | | | | | x | Axles reduction gears oil - Change |
| Gearbox oil - Change | | | | | x | Gearbox oil - Change |
| Battery charge - Check | x | | | | | Battery charge - Check |
| Every 2000 hours | | | | | | |
| Engine air filter - Replace | | | | | x | Engine air filter - Replace |
| Engine valve clearance - Check and adjust | x | | | | | Engine valve clearance - Check and adjust |
| Blowby recirculation filter - Replace | | | | | x | Blowby recirculation filter - Replace |
| Brake oil - Change | | | | | x | Brake oil - Change |
| Every 3000 hours | | | | | | |
| Drive belt - Replace | | | | | x | Drive belt - Replace |
| Fuel tank - Cleaning | | | x | | | Fuel tank - Cleaning |
| As required | | | | | | |
| Radiator - Cleaning | | | x | | | Radiator - Cleaning |
| Windshield washer fluid level - Check | x | | | | | Windshield washer fluid level - Check |
| Hydraulic connectors and hoses - Replace | | | | | x | Hydraulic connectors and hoses - Replace |
| Battery - Replace | | | | | x | Battery - Replace |
| Lights and rotary beacon - Replace | | | | | x | Lights and rotary beacon - Replace |
| Fuses and relays | | | | | x | Fuses and relays |