

Maintenance chart

			Change fluid						
			Drain fluid Replace						
			Grease Check						
				CK					
Service_Interval	Page	Service_Points	leaning Nb.						
Service_Interval	Nb.	Service_Points	of pts						
INITIAL 10 HOURS	Operat- ing In- struc- tions	Wheel bolt and nut torque			X				
	Alter- nator and air condi- tioning com- pres- sor (if equipped belt tension	Alternator and air conditioning compressor (if equipped) belt tension for models SR130, SR160, SR175, and SV18 5 only			X				
EVERY 10 HOURS OR DAI- LY	Clean tracks and compo- nents	Clean tracks and components		Х					
	Engine and hy- draulic coolers	Engine and hydraulic coolers			X				
	Engine coolant level	Engine coolant level			Х				
	Engine oil level	Engine oil level			Х				
	Lift arm, pivot points, coupler pins and cylin- der pins	Lift arm, pivot points, coupler pins and cylinder pins				X			
	Hy- draulic oil level	Hydraulic oil level			Х				

1



			Change fluid Drain fluid Boplaco				
			Replace Grease Check				
		Cle	aning				
Service_Interval	Page Nb.	Service_Points	Nb. of pts				
	Seat belt, re- straint bar, and seat in- terlock oper- ation check	Seat belt, lap bar and seat interlock operation check		X			
INITIAL 50 HOURS	Final drive chain tank oil	Final drive chain tank oil		X			
EVERY 50 HOURS	Cab in- take fil- ter	Cab intake filter		X			
	Alter- nator and air condi- tioning com- pres- sor (if equipped belt tension	Alternator and air conditioning compressor (if equipped) belt tension for models SR130, SR160, SR175, and SV18 5 only		X			
	Roll Over Pro- tective Struc- ture (ROPS) mech- anism and hard- ware check	Roll Over Protective Structure (ROPS) mechanism and hardware check		X			



			Change fluid							
			Drain flu					lid		
							се			
			Grease			se				
				Che	ck					
			Clea	aning						
Service_Interval	Page Nb.	Service_Points		Nb. of pts						
INITIAL 100 HOURS	Final drive oil (track mod- els)	Final drive oil (track models)								X
EVERY 250 HOURS	In-line fuel fil- ter	In-line fuel filter for models SR130 and SR160 only						Х		
	Fuel pre- filter	Fuel prefilter							Х	
	Drive chain tension check	Drive chain tension check				Х				
EVERY 500 HOURS	Engine oil and filter	Engine oil and filter								Х
	Fuel pre- filter	Fuel prefilter						Х		
	Fuel fil- ter	Fuel filter						Х		
	Hy- draulic oil filter	Hydraulic oil filter						Х		
	Final drive chain tank oil	Final drive chain tank oil				Х				
	Air clean- er ele- ments	Air cleaner elements						Х		
	Hard- ware - loose or dam- aged	Hardware - loose or damaged				х				



			Change fluid					
			Drain fluid Replace					
			Grease					
			Che	CK				
Service_Interval	Page	Service_Points	leaning Nb.					
Service_interval	Nb.	Service_romits	of pts					
	Final drive oil (track mod- els)	Final drive oil (track models)						×
EVERY 1000 HOURS	Hy- draulic sys- tems - Change fluid	Hydraulic fluid and filter						×
	Final drive chain tank oil	Final drive chain tank oil						X
	Oil Mist Sepa- rator (OMS) filter	Oil Mist Separator (OMS) filter for models SR130, SR160, SR175, and SV185				>	×	
EVERY 2000 HOURS	Engine coolant drain and flush	Engine coolant drain and flush						X
	Blow- by re- circula- tion fil- ter	Blowby re-circulation filter for models SR210, SR220, SR250, SV250, SV300, TR270, TR320, and TV380 only				3	×	
EVERY 4000 HOURS	Diesel Partic- ulate Filter (DPF)	Diesel Particulate Filter (DPF)				2	×	
AS REQUIRED	Diesel Partic- ulate Filter (DPF)	Diesel Particulate Filter (DPF)		×				