

Maintenance chart

Grease				Change fluid				
Check					R	eplace		
Cleaning					Drain fluid			
Service_Points]					Page Nb.		
EVERY 10 HOURS OR DAILY								
Clean tracks and components	x					Clean tracks and components		
Wheels and tires		x				Wheels and tires		
Engine and hydraulic coolers		x				Engine and hydraulic coolers		
Engine coolant level		x				Engine coolant level		
Engine oil level		x				Engine oil level		
Loader arm pivot points, coupler pins, and cylinder pins		×				Loader arm pivot points, cou- pler pins, and cylinder pins		
Hydraulic oil level		x				Hydraulic oil level		
Seat belt, restraint bar, and seat interlock operation check		x				Seat belt, restraint bar, and seat interlock operation check		
EVERY 50 HOURS	S							
Cab intake filter		x				Cab intake filter		
Air conditioning compressor belt tension		x				Air conditioning compressor belt tension		
Roll Over Protective Structure (ROPS) mechanism and hardware check		x				Roll Over Protective Structure (ROPS) mechanism and hard- ware check		
EVERY 250 HOUR	S							
Drive chain tension check		x	Τ			Drive chain tension check		
EVERY 500 HOUR	S		1	1	<u> </u>			
Engine oil and filter			x			Engine oil and filter		
Fuel prefilter				x		Fuel prefilter		
Fuel filter				x		Fuel filter		
Diesel Exhaust Fluid (DEF)/AdBlue® tank filter	x					Diesel Exhaust Fluid (DEF)/Ad- Blue® tank filter		
Diesel Exhaust Fluid (DEF)/AdBlue® sending unit filter – Radial lift	x					Diesel Exhaust Fluid (DEF)/Ad- Blue® sending unit filter - Ra- dial lift		
Hydraulic oil filter				x		Hydraulic oil filter		
Final drive chain tank oil		x				Final drive chain tank oil		
Air cleaner elements			1	x		Air cleaner elements		
Hardware - loose or damaged		x				Hardware - loose or damaged		
Final drive oil (track models)			x			Final drive oil (track models)		
EVERY 1000 HOUF	٢S							
Hydraulic fluid and filter					x	Hydraulic fluid and filter		
Final drive chain tank oil					x	Final drive chain tank oil		
Every 1500 hours								



Grease Check		Change fluid				
				Replace		
Cleaning			Drain fluid			
Service_Points				Page Nb.		
Oil Mist Separator (OMS) filter			x	Oil Mist Separator (OMS) filter		
Blow-by recirculation system			x	Blow-by recirculation system		
Every 3600 hours or two years						
Selective Catalytic Reduction (SCR) system - Replace supply module filter - Skid Steer Loader (SSL) machines only			x	Selective Catalytic Reduction (SCR) system - Replace sup- ply module filter - Skid Steer Loader (SSL) machines only		
Selective Catalytic Reduction (SCR) system - Replace supply module filter – Compact Track Loader (CLT) machines only			x	Selective Catalytic Reduction (SCR) system - Replace sup- ply module filter - Compact Track Loader (CTL) machines only		
EVERY 4000 HOURS						
Engine cooling system - Change fluid		x		Engine cooling system - Change fluid		