

## Maintenance chart

		Cleaning					Replace				
		Change fluid			Grease		Tire inflating			Drain fluid	
		Check					Adjust				
Service_Points							Page Nb.				
Daily inspection											
General		x									General
Every 10 hours											
Engine oil - Change		x									Engine oil - Change
Every 50 hours											
Bucket/attachment fittings - Grease		x									Bucket/attachment fittings - Grease
Machine fittings - Grease		x									Machine fittings - Grease
Hydraulic oil level - Check		x									Hydraulic oil level - Check
Transmission oil level - Check		x									Transmission oil level - Check
Engine coolant level - Check		x									Engine coolant level - Check
Initial 100 hours											
Wheel nuts tightening - Check		x									Wheel nuts tightening - Check
Engine oil and filter (Initial) - Change			x								Engine oil and filter (Initial) - Change
Selective Catalytic Reduction (SCR) in-line filter (Initial) - Cleaning				x							Selective Catalytic Reduction (SCR) in-line filter (Initial) - Cleaning
Fuel pre-filter (Initial) - Replace					x						Fuel pre-filter (Initial) - Replace
Fuel filter (Initial) - Replace					x						Fuel filter (Initial) - Replace
Hydraulic oil filters (Initial) - Replace					x						Hydraulic oil filters (Initial) - Replace
Front and rear axle oil (Initial) - Change			x								Front and rear axle oil (Initial) - Change
Every 100 hours											
Machine fittings - Grease		x									Machine fittings - Grease
Every 250 hours											
Drive shaft slip joints - Grease		x									Drive shaft slip joints - Grease
Cab air filters - Cleaning				x							Cab air filters - Cleaning
Wheels and tires pressure - Check						x					Wheels and tires pressure - Check
Drive belt - Check		x									Drive belt - Check
Every 500 hours											
Engine oil and filter - Replace					x						Engine oil and filter - Replace
Fuel pre-filter - Replace					x						Fuel pre-filter - Replace
Fuel filter - Replace					x						Fuel filter - Replace
Fuel tank sediment - Drain								x			Fuel tank sediment - Drain

Service_Points	Cleaning				Replace			
	Change fluid		Grease	Check	Tire inflating			
	Drain fluid				Adjust		Page Nb.	
	Adjust		Adjust		Page Nb.			
	Adjust		Adjust			Page Nb.		
Front and rear axle oil level - Check	x							
Front and rear axle oil - Severe duty - Change		x						Front and rear axle oil - Severe duty - Change
Roll Over Protective Structure (ROPS) - Check	x							Roll Over Protective Structure (ROPS) - Check
Battery fluid level - Check	x							Battery fluid level - Check
DEF/AdBlue® tank vent filter - Replace				x				DEF/AdBlue® tank vent filter - Replace
Selective Catalytic Reduction (SCR) in-line filter - Cleaning			x					Selective Catalytic Reduction (SCR) in-line filter - Cleaning
Every 1000 hours								
Pivot points - Grease		x						Pivot points - Grease
Hydraulic oil filter - Replace					x			Hydraulic oil filter - Replace
Drive belt - Replace					x			Drive belt - Replace
Cab air filters - Replace					x			Cab air filters - Replace
Engine breather filter - Replace					x			Engine breather filter - Replace
Front and rear axle oil - Change		x						Front and rear axle oil - Change
Every 1500 hours								
Transmission fluid and filter - Change			x					Transmission fluid and filter - Change
Transmission breather - Cleaning				x				Transmission breather - Cleaning
Gear-box - Calibration							x	Gear-box - Calibration
Transmission declutch pressure - Adjust - 4-speed transmission - 4-speed transmission							x	Transmission declutch pressure - Adjust - 4-speed transmission - 4-speed transmission
Every 2000 hours								
Hydraulic oil and filters - Change			x					Hydraulic oil and filters - Change
Engine air filters - Replace					x			Engine air filters - Replace
Frame and cab - Lubricate		x						Frame and cab - Lubricate
Engine valve clearance - Check and adjust	x							Engine valve clearance - Check and adjust
Every 4000 hours								
Selective Catalytic Reduction System (SCR) Supply Module filter - Replace					x			Selective Catalytic Reduction System (SCR) Supply Module filter - Replace

Cleaning					Replace					
Change fluid					Tire inflating					
Grease					Drain fluid					
Check					Adjust					
Service_Points					Page Nb.					
Diesel Exhaust Fluid (DEF)/AdBlue® tank suction - Cleaning				x						Diesel Exhaust Fluid (DEF)/Ad-Blue® tank suction - Cleaning
Engine coolant - Change				x						Engine coolant - Change
As required										
Fuel pre-filter - Drain fluid									x	Fuel pre-filter - Drain fluid
DEF/AdBlue® tank neck filter - Cleaning				x						DEF/AdBlue® tank neck filter - Cleaning
Urea Quality Sensor (UQS) - Replace								x		Urea Quality Sensor (UQS) - Replace
Air conditioning condenser - Cleaning				x						Air conditioning condenser - Cleaning
Height control and return-to-travel - Adjust									x	Height control and return-to-travel - Adjust
Return-to-dig - Adjust									x	Return-to-dig - Adjust
Parking brake - Check	x									Parking brake - Check
Secondary steering - Check	x									Secondary steering - Check
Cab service - Check	x									Cab service - Check
Windshield washer fluid level - Check	x									Windshield washer fluid level - Check
ELECTRICAL SYSTEM										
Battery - Cleaning				x						Battery - Cleaning
Battery electrolyte level - Check	x									Battery electrolyte level - Check
Auxiliary battery connections - Check	x									Auxiliary battery connections - Check
Battery - Replace								x		Battery - Replace
Fuses and relays - Replace								x		Fuses and relays - Replace
Lights - Replace								x		Lights - Replace