

## Maintenance chart

Service_Points	Grease				Change fluid			
	Check	Cleaning			Replace			
					Drain fluid			
								Page Nb.
<b>EVERY 10 HOURS OR DAILY</b>								
Clean tracks and components	x							Clean tracks and components
Wheels and tires		x						Wheels and tires
Engine and hydraulic coolers		x						Engine and hydraulic coolers
Engine coolant level		x						Engine coolant level
Engine oil level		x						Engine oil level
Loader arm pivot points, coupler pins, and cylinder pins			x					Loader arm pivot points, coupler pins, and cylinder pins
Hydraulic oil level		x						Hydraulic oil level
Seat belt, restraint bar, and seat interlock operation check		x						Seat belt, restraint bar, and seat interlock operation check
<b>EVERY 50 HOURS</b>								
Cab intake filter		x						Cab intake filter
Air conditioning compressor belt tension		x						Air conditioning compressor belt tension
Roll Over Protective Structure (ROPS) mechanism and hardware check		x						Roll Over Protective Structure (ROPS) mechanism and hardware check
<b>EVERY 250 HOURS</b>								
Drive chain tension check		x						Drive chain tension check
<b>EVERY 500 HOURS</b>								
Engine oil and filter				x				Engine oil and filter
Fuel prefilter					x			Fuel prefilter
Fuel filter					x			Fuel filter
Diesel Exhaust Fluid (DEF)/AdBlue® tank filter	x							Diesel Exhaust Fluid (DEF)/AdBlue® tank filter
Diesel Exhaust Fluid (DEF)/AdBlue® sending unit filter – Radial lift	x							Diesel Exhaust Fluid (DEF)/AdBlue® sending unit filter - Radial lift
Hydraulic oil filter					x			Hydraulic oil filter
Final drive chain tank oil		x						Final drive chain tank oil
Air cleaner elements					x			Air cleaner elements
Hardware - loose or damaged		x						Hardware - loose or damaged
Final drive oil (track models)				x				Final drive oil (track models)
<b>EVERY 1000 HOURS</b>								
Hydraulic fluid and filter						x		Hydraulic fluid and filter
Final drive chain tank oil						x		Final drive chain tank oil
<b>Every 1500 hours</b>								

Service_Points	Grease			Change fluid	
	Check			Replace	
	Cleaning			Drain fluid	Page Nb.
Oil Mist Separator (OMS) filter				x	Oil Mist Separator (OMS) filter
Blow-by recirculation system				x	Blow-by recirculation system
Every 3600 hours or two years					
Selective Catalytic Reduction (SCR) system - Replace supply module filter - Skid Steer Loader (SSL) machines only				x	Selective Catalytic Reduction (SCR) system - Replace supply module filter - Skid Steer Loader (SSL) machines only
Selective Catalytic Reduction (SCR) system - Replace supply module filter – Compact Track Loader (CTL) machines only				x	Selective Catalytic Reduction (SCR) system - Replace supply module filter - Compact Track Loader (CTL) machines only
EVERY 4000 HOURS					
Engine cooling system - Change fluid				x	Engine cooling system - Change fluid